



- | | | | |
|--------------------------|--------------------------|--|-------------------|
| 1. Screw | 23. Spring | 45. O-Ring | 62. Filter |
| 2. Upper Mounting Plate | 24. Starter Plunger | 46. Plug | 63. O-Ring |
| 3. Choke Shaft | 25. Diaphragm | 47. Washer | 64. Valve Seat |
| 4. Starter Plunger Lever | 26. Plunger Cap | 48. Main Jet | 65. Holding Plate |
| 5. Circlip | 27. Dust Seal | 49. Screw | 66. Valve Needle |
| 6. Spring Seat | 28. Cover | 50. Lockwasher | 67. Float |
| 7. Spring | 29. Lockwasher | 51. Screw | 68. Float Pin |
| 8. Steel Ball | 30. Screw | 52. Screw | 69. Gasket |
| 9. Spring | 31. 3-Way Joint | 53. Cover | 70. Float Bowl |
| 10. Nut | 32. Screw | 54. Spring | 71. Drain Plug |
| 11. Washer | 33. Lower Mounting Plate | 55. Spring Seat | 72. O-Ring |
| 12. Pulley | 34. Screw | 56. Clip | |
| 13. Spring | 35. Spring | 57. Jet Needle with Single Groove (US model) | |
| 14. Collar | 36. Bracket | 58. Jet Needle with Five Grooves (Other than US model) | |
| 15. Screw | 37. Bushing | 59. Vacuum Piston and Diaphragm Assembly | |
| 16. Cable Bracket | 38. Idle Adjusting Screw | 60. Carburetor Body | |
| 17. Seal | 39. Screw | 61. Needle Jet | |
| 18. Rubber Cap | 40. Spring Seat | | |
| 19. Plug (US model) | 41. Spring | | |
| 20. O-Ring | 42. Plug | | |
| 21. Pilot Screw | 43. O-Ring | | |
| 22. Joint | 44. Pilot Jet | | |