

Position	Description	Part Number		Position	Description	Part Number	
		35mm - 39mm	26mm - 33mm			35mm - 39mm	26mm - 33mm
1	Rubber Cap	1028-808-7000	R028-004-7000	45	Spring	1290-003-2001	1290-003-2001
2	Velocity Stack SH	1130-802-2001	1130-800-2001	46	O-Ring	0901-006-6000	0901-006-6000
2a	Velocity Stack LN	1130-803-2001	1130-801-2001	47	Screw	4110-801-1100	4110-801-1100
3	Clamp	1129-804-7000	1129-803-7000	48	Nut	0205-800-1100	0205-800-1100
4	Mount Adaptor	1253-xxxx-xxxx	1253-xxxx-xxxx	49	Bolt	0118-801-1100	0118-801-1100
4a	Mount Adaptor	N195-size	N195-size	50	Plain Washer	0301-009-1100	0301-009-1100
5	O-Ring	0901-012-6000	0901-812-6000	51	Wave Washer	2007-800-2000	2007-800-2000
6	Tension Spring	1291-804-2000	1291-804-2000	52	Plain Washer	0301-104-7000	0301-104-7000
7	Tube	0804-846-0000	0804-846-0000	53	Clip	W9302-25000	W9302-25000
8	Collar	1118-878-2000	1118-878-2000	54	Collar	1118-801-2000	1118-801-2000
9	Screw	4139-802-1100	4139-802-1100	55	Shaft	1111-813-2000	1111-813-2000
10	Top	1030-814-2002	1030-814-2002	56	Lever	1113-881-2001	1113-881-2001
11	Gasket	1031-802-2002	1031-802-2002	57	Lever	1113-882-2000	1113-882-2000
12	Jet Needle	N427-51-size	N427-11Yxx	58	Screw	4139-803-1100	4139-803-1100
12a	Jet Needle	N/A	N427-12Yxx	59	Bracket	1190-833-2000	1190-833-2000
13	Clip	0403-802-1000	0403-802-1000	59a	Bracket	N/A	1190-853-2001
14	Lock Nut	0208-803-1200	0208-803-1200	59b	Bracket	N/A	1190-854-2001
15	Stop Screw	1034-814-2000	1034-814-2000	59c	Bracket	N/A	1190-855-2001
16	Screw	W9155-04080	W9155-04060	60	T-Joint	1077-804-7000	1077-804-7000
17	Valve Plate	1019-801-2102	1019-802-2102	61	T-Joint	1077-803-7000	1077-803-7000
18	Clip	16179-676-3000	16179-676-3000	62	O-Ring	W9351-13057	W9351-13057
19	Plain Washer	0301-825-7000	0301-825-7000	63	Washer	0301090-1201	N/A
20	Link Arm	1061-805-2000	1061-805-2000	64	Plate	1190-832-2000	1190-832-2000
21	Spring	1291-802-2000	1291-802-2000	65	Rubber Cap	1028-808-7000	1028-808-7000
22	Throttle Valve	N502-03x00	N502-04x00	66	Clip	W9535-55000	W9535-55000
23	Float Bowl	1050-825-2000	1050-825-2000	67	Link Lever	1100-836-2100	1100-836-2100
24	Drain Screw	1018-801-2000	1018-801-2000	68	Collar	1118-881-7000	1118-881-7000
25	O-Ring	16173-001-0040	16173-001-0040	69	Collar	1118-880-7000	1118-880-7000
26	Starter Jet	1001-108-2000-size	1001-108-2000-size	70	Spring	1305-883-2000	1305-883-2000
27	O-Ring	0901-811-6000	0901-811-6000	71	Throttle Shaft	5025-847-2200	5025-847-2200
28	Arm Pin	W9525-25250	W9525-25250	71a	Throttle Shaft	5025-931-2100	N/A
29	Float Bowl	1052-818-2100	1052-818-2100	72	Screw	4139-803-1100	4139-803-1100
30	Clip	0405-016-1000	0405-019-1000	73	Bracket	1190-xxxx-xxxx	1190-xxxx-xxxx
31	Needle Valve	W9522-53001	W9522-53001	74	Idle Speed Screw	1034-808-2000	1034-808-2000
32	Screw	N114-06161	N/A	75	Spring	1290-849-2003	1290-849-2003
33	Plate	1164-038-2000	1164-038-2000	76	Plain Washer	16178-ML7-0040	16178-ML7-0040
34	Valve Seat	N360-01x00	N360-01x00	77	Nut	94001-05080-0S	94001-05080-0S
35	O-Ring	16075-MB0-0030	16075-MB0-0030	78	Screw	93500-05025-1H	93500-05025-1H
36	Main Air Jet	N424-14-size	N424-14-size	79	Rubber Cap	1028-042-7001	1028-042-7001
37	Slow Jet	N424-24-size	N424-24-size	80	Cap	1029-805-7000	1029-805-7000
38	Main Jet	99101-357-size	99101-357-size	81	Spring	1300-136-2000	1300-136-2000
39	Nozzle Holder	N413-04x00	N413-04x00	82	Starter Valve	1166-802-2101	1166-802-2101
39a	Nozzle Holder	N426-04000	N426-04000	83	Seal	1099-805-7000	1099-805-7000
40	Screw	4115-800-1101	4115-800-1101	84	L-Joint	1074-817-7001	1074-817-7001
41	Jet Block	1605-xxxx-2001	1605-xxxx-2001	85	Starter Jet	1001-101-2000-size	1001-101-2000-size
42	Gasket	1202-808-2002	1202-809-2002	86	Cap	1096-810-2000	1096-810-2000
43	Needle Jet	1041-800-2001	1041-800-2001	87	Bracket	1190-870-2000	N/A
44	Air Screw	1014-004-2002	1014-004-2002				