

Position	Part Number	Description	Position	Part Number	Description
1	N/A	Carburettor Body #1	51	C5-0510	Screw: Throttle Cable Bracket
2	N/A	Carburettor Body #2	52	VM28/230	Screw: Carb Top
3	N/A	Carburettor Body #3	53	VM33/26	Lifting Arm Assy: Throttle Valve
4	N/A	Carburettor Body #4	55	VM33/68a	Lifting Arm: Throttle Valve (Adjustable)
5	VM33/31	Gasket: Venturi Block	56	VM28/403	Seal: Throttle Shaft (Felt)
6	VM33/20	Venturi Block	59	N138186	Screw: Top Body Mounting Rail
7	BN042/64	Gasket: Drain Screw	60	VM33/67	Bracket Plate (Rear)
8	VM33/77	Drain Screw	62	VM33/35	Spring
9	B34/52-0.6	Gasket: Float Valve Assy	63	N148013	Cap: Vacuum Fitting
10	N122032-size	Float Valve Assy	64	VM22/349	Spring: Throtte Return
11	VM30/160	Pivot Pin: Float Assy	65	C2-0508-B	Screw: Throttle Return Spring Anchor
12	VM18/233	Filter: Float Valve Assy	66	VM33/34	Bracket: Adjuster
13	VM20/369	E-clip: Jet Needle	67	VM33/23	Bracket: Throttle Return Spring Anchor
14	VM30/257	Gasket: Float Bowl	68	VM33/58	Bracket: ?
15	J8-#####	Jet Needle	69	C2-0408-B	Screw
16	VM29/16-size	Needle Jet	70	VM33/63	Cap: Throttle Shaft End
17	697-05001a	Holder: Main Jet	71	VM22/210-size	Pilot Jet
18	N100604-size	Main Jet	72	N138049a	Screw: Adjuster
19	C6=0307	Screw	73	N110209	Spring: Tickover Screw
20	VM26/260	Float Assy	74	N141217	Washer: Tickover Screw
21	VM29/20-100	Float Bowl	75	VM33/43	Bracket: Throttle Cables
22	888-36003a	Hose: Breather	76	603-25001a	Tickover Screw
23	792-20008	Pipe: Fuel Transfer	77	N158052	Screw: Cold Start Crank
24	VM26/268	Washer	78	VM26/435	Crank: Cold Start
25	BN38/135	E-clip: Throttle Return Spring Anchor	79	VM33/70	Plug: Side
26	CW2=0416-B	Screw: Float Bowl	80	VM33/72	Cap: Fuel Inlet
27	792-20007	Pipe: Fuel Transfer	81	VM24/532	Spacer: Throttle Return Spring Anchor
28	BV30/40	O-ring: Fuel Transfer Pipe	82	VM28/449	Washer: Friction for Cold Start Lever
29	832-39003-size	Throttle Valve	83	VM28/293	Spring: Friction for Cold Start Lever
30	VM33/60	Spacer: Retaining Jet Needle	84	VM28/269	Screw: Friction for Cold Start Lever
31	VM33/71	Lifting Plate: Throttle Valve	85	VM33/56a	Lever & Shaft: Cold Start
32	CW2=0305	Screw: Throttle Valve Lifting Plate	86	C2-0306-B	Screw: Cover
33	VM33/32	Gasket: Carburettor Top	87	VM33/59	Cover
34	N1238060	Lock Nut	88	VM34/510	Plunger: Cold Start
35	VM33/21	Screw: Lifting Arm Adjustment	89	VM16/42a	Spring: Plunger
36	730-06005	Screw	90	VM18/249	Clip: Retaining Cold Start Collar
37	VM33/64	Lifting Arm Assy: Throttle Valve	91	KP/13	E-clip: Cold Start
38	776-39001	Carburettor Top	92	VM28/450	Spacer: Retaining Cold Start
39	W4-04-0	Spring Washer: Throttle Valve Lifting Arm	93	VM20/455	Dust Cover: Cold Start
40	VM33/75	Mounting Rail: Carb Bodies (Bottom)	94	VM28/359	Collar: Cold Start
41	C2-0512-B	Screw: CarbBody Mounting Rail (Bottom)	95	M12F/46a	Spring: Slow Air Screw
42	B401/10	Washer: Throttle Valve Link (Plastic)	96	VM14/75	O-ring: Slow Air Screw
43	VM33/45	Link: Throttle Valve Lifter	97	VM26/287	Slow Air Screw
44	VM33/49	Spring Clip: Throttle Valve Link	98	OS/05b	O-ring: Throttle Shaft Cover
45	M10/56	Washer: Throttle Valve Link	99	W4-05	Spring: Cold Start
46	BSW28/70	E-clip: Throttle Valve Link	100	BV32/196	Washer
47	813-28001	Cover: Throttle Shaft	101	VM33/61	Bearing
48	700-17003a	Throttle Shaft	102	VM33/37	Seal: Felt
49	VM33/52a	Lifting Arm: Throttle Valve (Fixed)	103	946-17001	Washer: ?
50	VM33/73	Screw: Throttle Valve Lifting Arm	105	BS30-97-size	Air Jet: Main